




AIRBOOSTER RACE POD X


User's Guide

GB

- * Recommended to use Topeak threaded CO₂ cartridges
- * Please read all instructions before first use

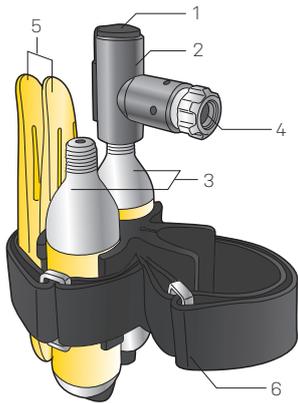

1. Integrated dust cap
2. AirBooster inflator
3. 16g Threaded CO₂ cartridge x 2 pcs (included)
4. AirBooster inflation head
5. Topeak Shuttle lever 1.1 (included)
6. Bracket with mounting strap

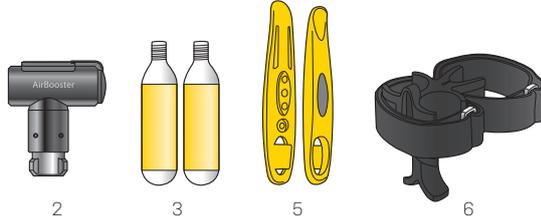

ROUND TUBE



Fits
Ø 27.2 mm ~ Ø 44 mm

AERO TUBE



Fits Perimeter
114 mm ~ 155 mm


After installation, cut the strap for proper length.



HOW TO DISASSEMBLE AIRBOOSTER RACE POD X




HOW TO STORE CO₂ CARTRIDGE

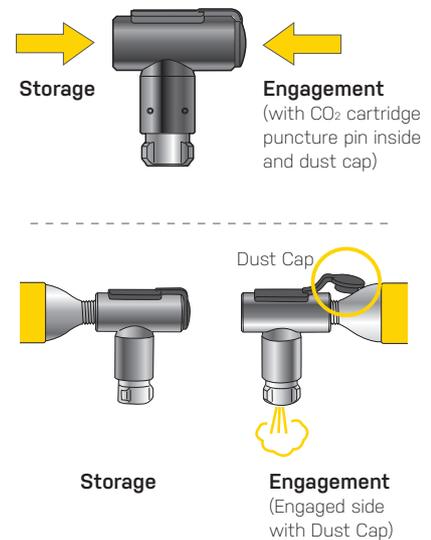

HOW TO USE CO₂ CARTRIDGE

Presta Valve

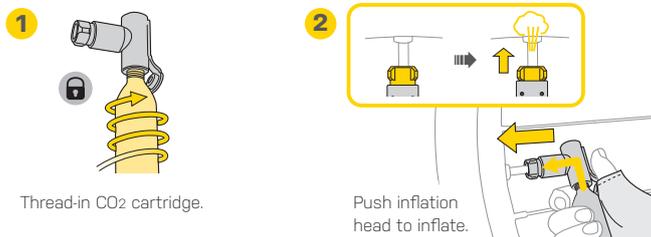

NOTE



Schrader Valve



SPARE PARTS



Art no. TCOT-2
TCOT-5




O-ring Replacement Kit
Art no. TRK-HR01

The valve head o-ring is subject to wear and may cause air leakage over time. Periodically inspect and replace o-ring if needed.

WARNING

1. If using the AirBooster inflator continuously, make sure to wait 20 seconds in between cartridges for the rubber grommet inside the AirBooster inflation head to return to its original position. Otherwise, a gas leak may occur and prevent proper inflation.
2. Tighten the CO₂ cartridge before using CO₂ inflation function. Failure to do so will cause improper operation and may cause injury.
3. **DO NOT** remove CO₂ cartridge if it is still charged with gas. Completely discharge the CO₂ cartridge before removal.
4. When opening the CO₂ cartridge, point the AirBooster inflator head away from yourself and others.
5. **DO NOT** use AirBooster Inflator if any part is cracked or broken.
6. **DO NOT** expose the CO₂ cartridge to heat, or store at temperatures above 120°F (49°C), or store in enclosed vehicles.
7. Make sure to wear gloves when inflating to avoid injury.
8. The barrel and CO₂ cartridge may become extremely cold / frosty when the CO₂ gas is expelled. **DO NOT** try to unscrew the AirBooster inflation head until it has warmed sufficiently to touch.
9. Keep out of reach of children.

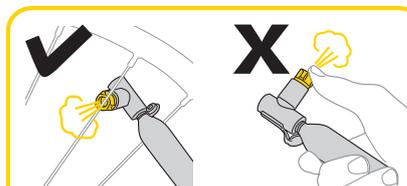

After each inflation, make sure all CO₂ gas has been discharged by pushing the AirBooster inflating head several times.

WARRANTY

2-year Warranty: All mechanical components against manufacturer defects only.

Warranty Claim Requirements
To obtain warranty service, you must have your original sales receipt. Items returned without a sales receipt will assume that the warranty begins on the date of manufacture. All warranties will be void if the product is damaged due to user crash, abuse, system alteration, modification, or used in any way not intended as described in this manual.

* The specifications and design are subject to change without notice.

Please contact your Topeak dealer with any questions.
For USA customer service call: 1-800-250-3068
www.topeak.com