
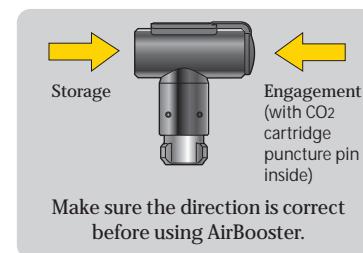
 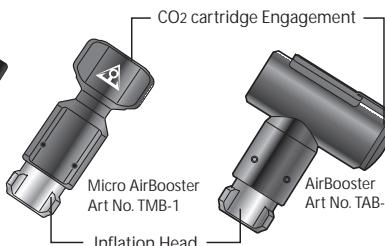


# Micro AirBooster & AirBooster

## User's Guide

Rubber Spacer for Micro AirBooster  
Remove Rubber Spacer from CO<sub>2</sub> cartridge before use.  
Rubber Spacer should be reused for storing CO<sub>2</sub> cartridges.

### Storage




- \* Accepts all threaded CO<sub>2</sub> cartridges.
- \* Recommended to use Topeak threaded CO<sub>2</sub> cartridges.
- \* Please read all instructions before first use.

### HOW TO USE CO<sub>2</sub> CARTRIDGE (\*AirBooster as example)

#### Presta Valve



Thread-in CO<sub>2</sub> cartridge.

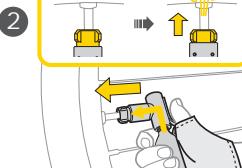


Start and regulate CO<sub>2</sub> flow by pushing inflation head onto valve stem.


#### Schrader Valve



Thread-in CO<sub>2</sub> cartridge.

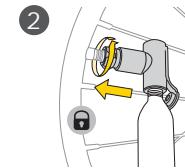

Install and thread-in inflation head to Schrader valve.

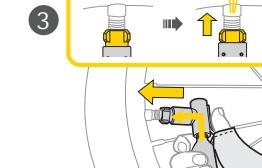

Start and regulate CO<sub>2</sub> flow by pushing inflation head onto valve stem.


### NOTE



To avoid possible personal injury and damage to bike and/or tool, insure to disengage CO<sub>2</sub> inflator properly after use by unthreading inflation head in correct direction.

### WARNING

1. If using the Micro AirBooster/ AirBooster inflator continuously, make sure to wait 20 seconds in between cartridges for the rubber grommet inside the inflation head to return to its original position. Otherwise, a gas leak may occur and prevent proper inflation.
2. Tighten the CO<sub>2</sub> cartridge before using CO<sub>2</sub> inflation function. Failure to do so will cause improper operation and may cause injury.
3. DO NOT remove CO<sub>2</sub> cartridge if it is still charged with gas. Completely discharge the CO<sub>2</sub> cartridge before removal.
4. When opening the CO<sub>2</sub> cartridge, point the inflator head away from yourself and others.
5. DO NOT use Micro AirBooster/ AirBooster Inflator if any part is cracked or broken.
6. DO NOT expose the CO<sub>2</sub> cartridge to heat, or store at temperatures above 120°F (49°C), or store in enclosed vehicles.
7. Make sure to wear gloves when inflating to avoid injury.
8. The barrel and CO<sub>2</sub> cartridge may become extremely cold/ frosty when the CO<sub>2</sub> gas is expelled. DO NOT try to unscrew the Micro AirBooster/ AirBooster inflation head until it has warmed sufficiently to touch.
9. Keep out of reach of children.

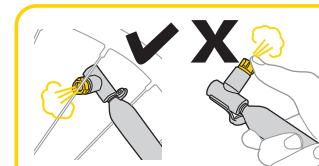

After each inflation, make sure all CO<sub>2</sub> gas has been discharged by pushing the Micro AirBooster/ AirBooster inflation head several times.

### SPARE PARTS



25g Threaded CO<sub>2</sub> cartridge x2 pcs  
Art no. TCO25-2



16g Threaded CO<sub>2</sub> cartridge  
Art no. TCOT-2 (2 pcs)  
TCOT-5 (5 pcs)



O-ring  
Replacement Kit  
Art no. TRK-HR01

The valve head o-ring is subject to wear and may cause air leakage over time. Periodically inspect and replace o-ring if needed.

### WARRANTY

2-year Warranty: All mechanical components against manufacturer defects only.  
Warranty Claim Requirements

To obtain warranty service, you must have your original sales receipt. Items returned without a sales receipt will assume that the warranty begins on the date of manufacture. All warranties will be void if the product is damaged due to user crash, abuse, system alteration, modification, or used in any way not intended as described in this manual.

\* The specifications and design are subject to change without notice.  
Please contact your Topeak dealer with any questions.

For USA customer service call: 1-800-250-3068  
www.topeak.com

Copyright © Topeak, Inc. 2012 M-TABTMB-1 GB 03/12

Prepare to Ride