


## WARNING


- HybridRocket RX fits Presta Valve only.
- Read this User's Guide thoroughly, comply with all instructions, and understand safety information before first use.
- To avoid possibly freezing your hand, make sure to wear full finger gloves before operation.
- CO<sub>2</sub> cartridge contains compressed high pressure CO<sub>2</sub> gas. Incorrect operation poses potential risk of harm to you or others nearby.
- During operation, DO NOT point the CO<sub>2</sub> cartridge towards you or others.
- Insure that the inner tube valve is open before inflating with CO<sub>2</sub> cartridge.
- Before disengaging CO<sub>2</sub> cartridge, insure all CO<sub>2</sub> gas has discharged. Failure to do so may cause bodily harm or damage to inflater head.
- Recommend to use Topeak Threaded CO<sub>2</sub> cartridges only.

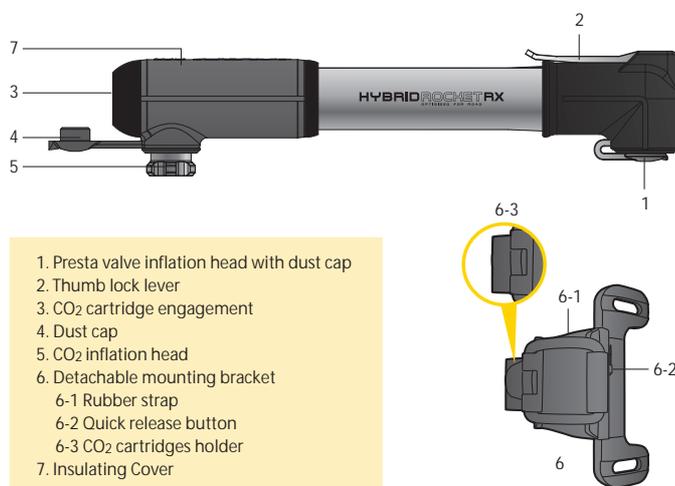

1. Presta valve inflation head with dust cap
2. Thumb lock lever
3. CO<sub>2</sub> cartridge engagement
4. Dust cap
5. CO<sub>2</sub> inflation head
6. Detachable mounting bracket
  - 6-1 Rubber strap
  - 6-2 Quick release button
  - 6-3 CO<sub>2</sub> cartridges holder
7. Insulating Cover


## INFLATION

### CO<sub>2</sub> Inflation

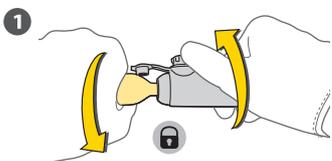


Thread CO<sub>2</sub> cartridge clockwise until full engagement is achieved. Be careful not to cross thread the CO<sub>2</sub> cartridge.

Hold pump body as show to prevent twisting of the insulating cover.

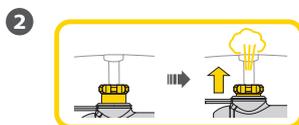


Push inflation head to inflate.

\* Turn to loosen inflation head after use.

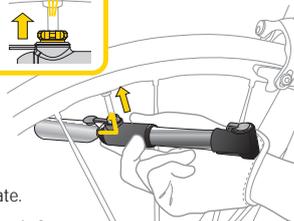


### Hand Inflation

#### Presta Valve Only

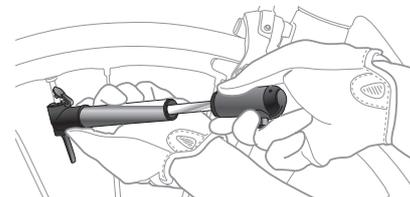

## IMPORTANT NOTES

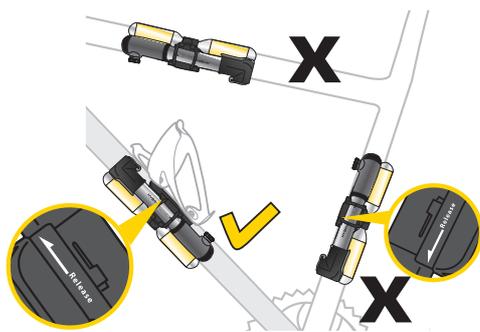

Make sure to install HybridRocket series pumps and CO<sub>2</sub> cartridges on Non-Drive side (left) downtube of bike only. The release arrow should be pointing towards the headtube.

DO NOT install Hybrid-Rocket pumps on seattube, seatpost or toptube.

HybridRocket series pumps can be mounted on bike or detached and put inside backpack.



Topeak Air Backpack  
Art No. TABP-1M

## SPARE PARTS



16g Threaded CO<sub>2</sub> Cartridge  
Art no. TCOT-2  
(2 pieces)



O-ring Replacement kit  
Art no. TRK-HR01


The valve head o-ring is subject to wear and may cause air leakage over time. Periodically inspect and replace o-ring if needed.




16g Threaded CO<sub>2</sub> Cartridge  
Art no. TCOT-5  
(5 pieces)

## MOUNTING BRACKET FUNCTION

### Quick Release

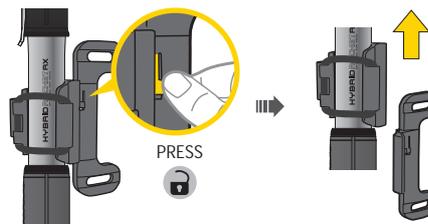


### CO<sub>2</sub> Cartridge Storage

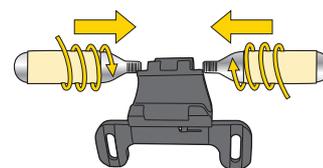

## WARNING

1. If using the CO<sub>2</sub> inflator continuously, make sure to wait 20 seconds in between cartridges for the rubber grommet inside the CO<sub>2</sub> inflation head to return to its original position. Otherwise, a gas leak may occur and prevent proper inflation.
2. Tighten the CO<sub>2</sub> cartridge before using CO<sub>2</sub> inflation function. Failure to do so will cause improper operation and may cause injury.
3. DO NOT remove CO<sub>2</sub> cartridge if it is still charged with gas. Completely discharge the CO<sub>2</sub> cartridge before removal.
4. When opening the CO<sub>2</sub> cartridge, point the CO<sub>2</sub> inflator away from yourself and others.
5. DO NOT use CO<sub>2</sub> Inflator if any part is cracked or broken.
6. DO NOT expose the CO<sub>2</sub> cartridge to heat, or store at temperatures above 120°F (49°C), or store in enclosed vehicles.
7. If the CO<sub>2</sub> gas does not flow smoothly, the rubber seal of the inflation head may be frozen and impede the flow of CO<sub>2</sub> gas.
8. The barrel and CO<sub>2</sub> cartridge may become extremely cold/frosty when the CO<sub>2</sub> gas is expelled. DO NOT try to unscrew the CO<sub>2</sub> inflation head until it has warmed sufficiently to touch.
9. Keep out of reach of children.

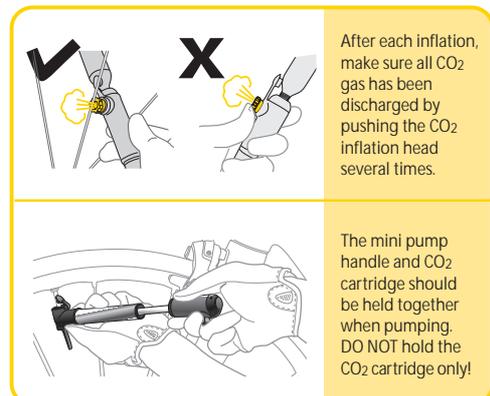

After each inflation, make sure all CO<sub>2</sub> gas has been discharged by pushing the CO<sub>2</sub> inflation head several times.

The mini pump handle and CO<sub>2</sub> cartridge should be held together when pumping. DO NOT hold the CO<sub>2</sub> cartridge only!

## WARRANTY

2-year Warranty: All mechanical components against manufacturer defects only. **Warranty Claim Requirements**  
To obtain warranty service, you must have your original sales receipt. Items returned without a sales receipt will assume that the warranty begins on the date of manufacture. All warranties will be void if the product is damaged due to user crash, abuse, system alteration, modification, or used in any way not intended as described in this manual.  
\* The specifications and design are subject to change without notice. Please contact your Topeak dealer with any questions.  
For USA customer service, call: 1-800-250-3068  
www.topeak.com