



Mounts on Topeak floor pump hose for storage

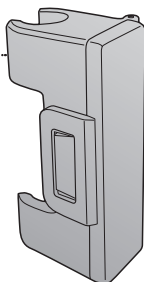

Storage Box


SCHRADER
valve core
screwdriver

**Two-piece
PRESTA**
valve core
screwdriver

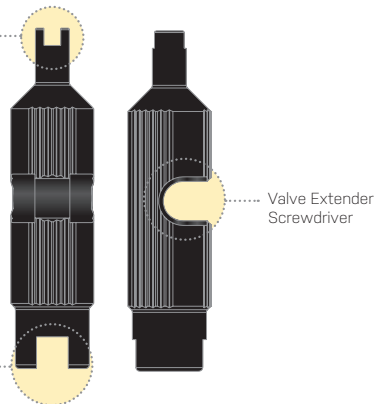


HOW TO REMOVE VALVE CORE

SCHRADER Valve

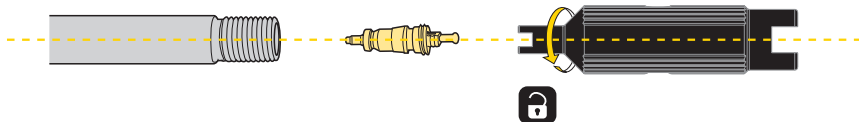


Two-piece PRESTA Valve

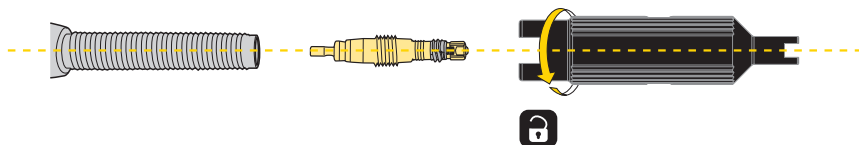

HOW TO RELEASE/ TIGHTEN VALVE EXTENDER

Valve tool fits extender on flats as shown.

Turn valve tool to release or tighten the valve extender.

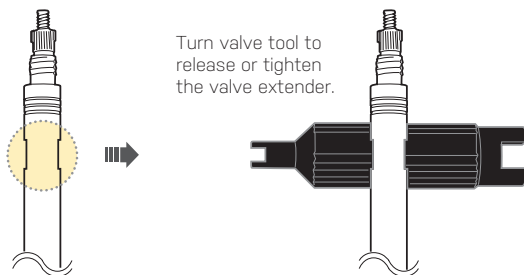

WARRANTY

2-year Warranty: All mechanical components against manufacturer defects only.

Warranty Claim Requirements
To obtain warranty service, you must have your original sales receipt. Items returned without a sales receipt will assume that the warranty begins on the date of manufacture. All warranties will be void if the product is damaged due to user crash, abuse, system alteration, modification, or used in any way not intended as described in this manual.

* The specifications and design are subject to change without notice.

Please contact your Topeak dealer with any questions. For USA customer service, call: 1-800-250-3068 www.topeak.com